



Innovation
With a Human Touch

4F-1, 236, Fu-Te 2nd Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097


Lens Carriage Roller Changing Process Venus II

Version: 1.0
May 20, 2014


Revision History :

Version	Date	Page	CONTENTS
1.0	May, 20 2014		First release

1. Dismount two screws on the top of lens carriage (see red circles below) and the lens carriage can loosen from X axis rail.

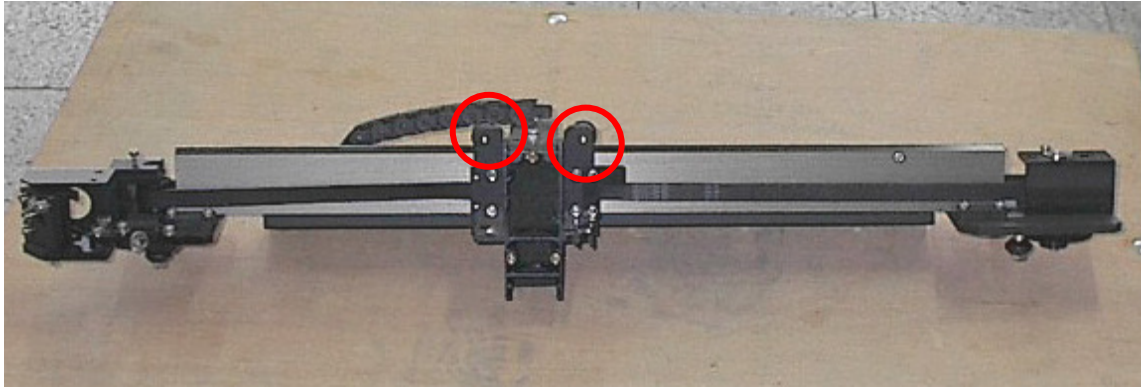

2. On the front of lens carriage, there are four screws for x axis belt retainer (see red circles below. Two screws on the right and two screws on the left). On the back of lens carriage, the location of the belt retainer can be seen. Loosen the belt retainer, the lens carriage can remove from x axis belt.

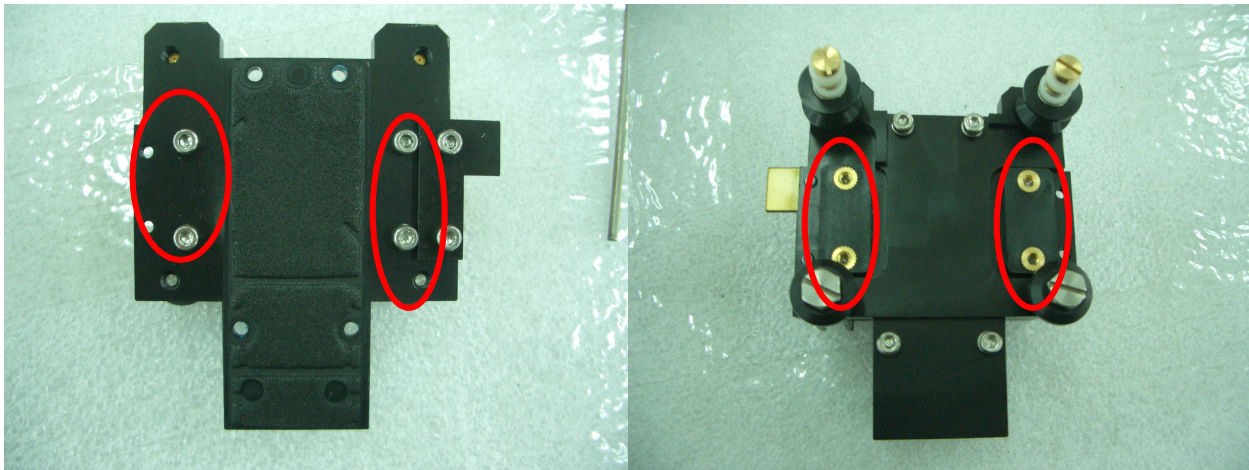

3. When mounting back the top rollers, the rollers and springs have to be correct sequence. After tighten the top rollers to the end, it needs to be loosen one circle back, otherwise the roller tension is too tight.

